

# Metal

## Hardware




**THANK YOU** Your new hardware has been custom crafted from the highest quality materials. Once installed, your hardware will provide you with a lifetime of beauty and trouble-free use.

**INSTALLING** your new hardware is easy. Simply follow our step-by-step instructions. We recommend that you read through all the instructions before you start.

MOUNTING BRACKET



## OUTSIDE MOUNT SINGLE ROD AND BRACKETS

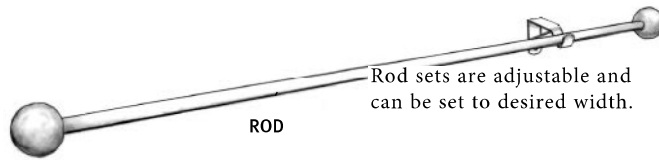

## CEILING MOUNT AND CORNER/BAY WINDOW BRACKETS



ENCLOSED BRACKET



ELBOW BRACKET

## GETTING STARTED

**REMOVE** the hardware from the packaging.

**Do not dispose of packaging until the hardware is operating to your satisfaction.**

Check the diagram to make sure you have all the parts indicated for the appropriate type of installation.

**TOOLS** you may need to install your hardware: pencil, screwdriver, 1/4" nut driver, level, pliers and a drill with 3/8" drill bit.

Your brackets must be securely attached to the mounting surface. When screwing into a surface, the included screws must hit wood studs. Otherwise, use a secure fastener as illustrated (not included).

**WALLBOARD OR PLASTER:** Use a secure fastener designed for hollow wall applications.

**METAL:** Pre-drill holes and use sheet metal screws.

**CONCRETE, STONE, BRICK OR TILE:** Use a masonry drill and appropriate plugs, anchors or screws.


\*When selecting a fastener, make sure it is designed to support the weight of the product being installed. Follow the fastener manufacturer's instructions for proper installation of the fastener.

## OUTSIDE MOUNT DOUBLE ROD AND BRACKETS


MOUNTING BRACKET

BACK ROD

FRONT ROD

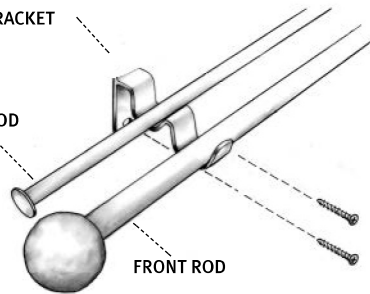

## INSIDE MOUNT ROD AND BRACKETS

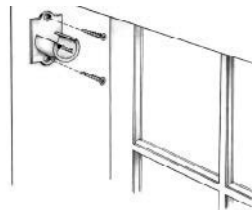

Install inside mount brackets in desired location and thread ends of the rods into the brackets.