
Metal

Hardware

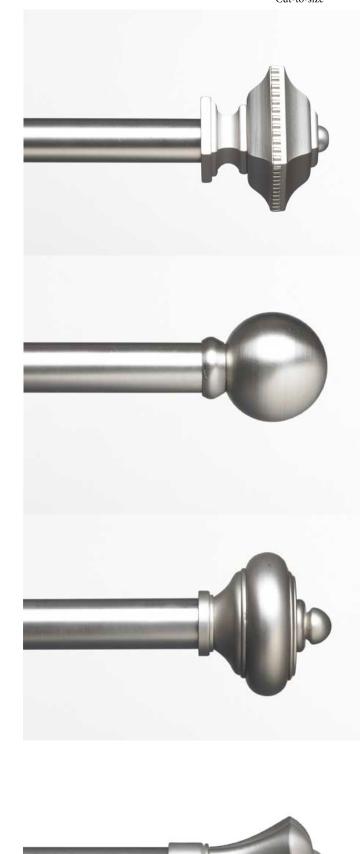





THANK YOU Your new hardware has been custom crafted from the highest quality materials. Once installed, your hardware will provide you with a lifetime of beauty and trouble-free use.

INSTALLING your new hardware is easy. Simply follow our step-bystep instructions. We recommend that you read through all the instructions before you start.

GETTING STARTED

REMOVE the hardware from the packaging.

Do not dispose of packaging until the hardware is operating to your satisfaction.

Check the diagram to make sure you have all the parts indicated for the appropriate type of installation.

TOOLS you may need to install your hardware: pencil, screwdriver, //" nut driver, level, pliers and a drill with //4," drill bit.

Your brackets must be securely attached to the mounting surface. When screwing into a surface, the included screws must hit wood studs. Otherwise, use a secure fastener as illustrated (not included).

WALLBOARD OR PLASTER: Use a secure fastener designed for hollow wall applications.

METAL: Pre-drill holes and use sheet metal screws.


CONCRETE, STONE, BRICK OR TILE:

Use a masonry drill and appropriate plugs, anchors or screws

*When selecting a fastener, make sure it is designed to support the weight of the product being installed. Follow the fastener manufacturer's instructions for proper installation of the fastener.

MOUNTING BRACKET


OUTSIDE MOUNT SINGLE ROD AND BRACKETS




CEILING MOUNT AND CORNER/BAY WINDOW BRACKETS



OUTSIDE MOUNT DOUBLE ROD AND BRACKETS

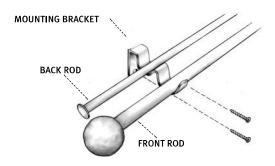

INSIDE MOUNT ROD AND BRACKETS

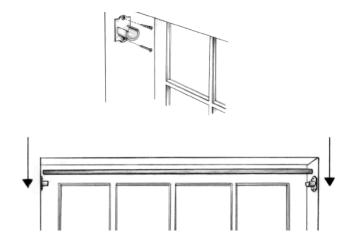

Using a pencil, mark the position on both sides of the window frame where the mounting plates will be attached. The height is determined by the window treatment being placed on the rod. Attach with the screws provided making sure the mounting plates are aligned and level with one another. Each side of the rod can now be dropped into the mounting plates.