

SEDONA

HARDWARE



SEDONA HARDWARE INSTALLATION INSTRUCTIONS

NOTE: We recommend the drapery hardware installation be performed by a professional installer.

Hardware included

- 1 Curtain Rod
- 2 Finials
- 2 **Hidden Brackets** with wall mounting screws
- Bracket Channel Kit - 2 Bracket Channels, 8 Wood Screws, 3 Connector Plates, 6 Hex Socket Screws and 1 Hex Key Tool.

Note: Extra connector plate and wall bracket screws will be included for center bracket on multi-segment rod sets.

- **Note:** (Rod sets longer than 72" will have additional hardware included)

Tools required for installation

- Tape Measure
- Drill Motor
- Level
- Phillips Screwdriver
- Pencil
- 5/64" Hex Key (included)
- 5/32" Hex Key (included)

Hidden Bracket



Step 1- Follow **BRACKET CHANNEL INSTALLATION INSTRUCTIONS** on page 3.

Step 2- With bracket channels properly installed on rod, measure the centers of each bracket channel and transfer measurements to the wall above your window. **Note:** The height of your brackets are determined by the length of your window treatments.

Step 3- Using the wall mounting screws provided, attach wall plates to wall where marks were made. (**See PIC #1**). Place cover over threaded stud and tighten post onto stud (**See PIC #2**). Note: Make sure the set screw slot on the post is on the outside away from the wall.


Step 4- Slide bracket onto post and tighten set screw with 5/64" Hex Key (**See PIC #3**).

NOTE: If installing a double rod set, attach back rod first by removing square nuts from bracket and sliding the nuts in the top channel of the rod. Align the nuts with the brackets and attach back rod to brackets.

Step 5- Align the connector plates with the brackets on the wall and hook the rod to the brackets.

Step 6- Center rod over window and tighten Hex Socket screws with 5/32" Hex Key (included).

Step 7- Attach finials to the ends of your drapery rod.

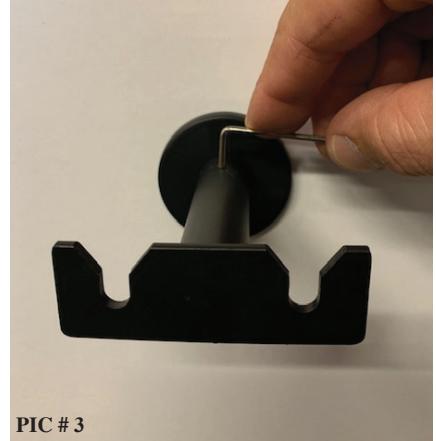

BRACKET CHANNEL INSTALLATION INSTRUCTIONS

BRACKET CHANNEL KIT will include- 2 Bracket Channels, 8 Wood Screws, 3 Connector Plates, 6 Hex Socket Screws and 1 Hex Key Tool. **Note:** Extra Connector Plate and Hex Socket Screws will be included for center bracket on multi-segment rod sets.


NOTE: Each rod set has multiple channels routed on the back of the rod. The aluminum channel bracket and connector plate must be installed prior to mounting the rod set to the wall or ceiling. If the rod set has multi-segments, the center bracket channel will be attached to one segment.

NOTE: If installing a multi-segment rod set, MAKE SURE CONNECTOR PLATE IS INSERTED INTO CENTER BRACKET CHANNEL BEFORE JOINING SEGMENTS TOGETHER. (**See PIC #1**). Align pre-drilled holes and use wood screws provided to secure segments together (**See PIC #2**).

Step 1- Thread the hex socket screws into connector plate making sure the screws are flush with the back of the connector plate. Slide connector plate into bracket channel (**See PIC #3**).

Step 2- Insert bracket channel into routed slot on the back of rod and secure bracket channel with the 4 wood screws provided. (**See PIC #4**).

NOTE: Connector plate should slide back and forth for adjustment after attaching to wall brackets.

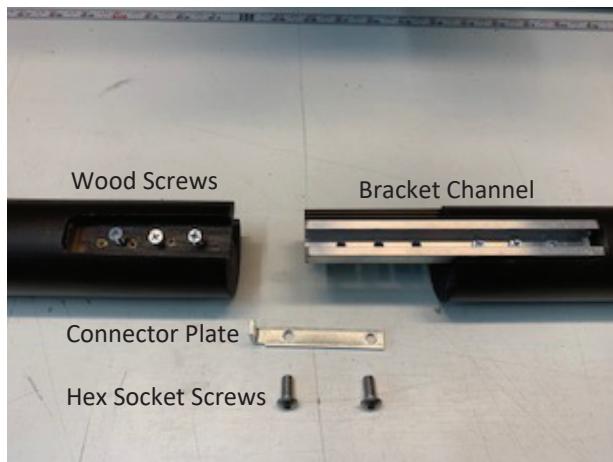

PIC #1



PIC #2



PIC #3



PIC #4