


Installing Faux Romans: Inside Mount

The Faux Roman headrail is pre-drilled for direct mount to the window frame using the 3" screws provided. Before installing, make sure that both sides of the Faux Roman are the same distance from the window.

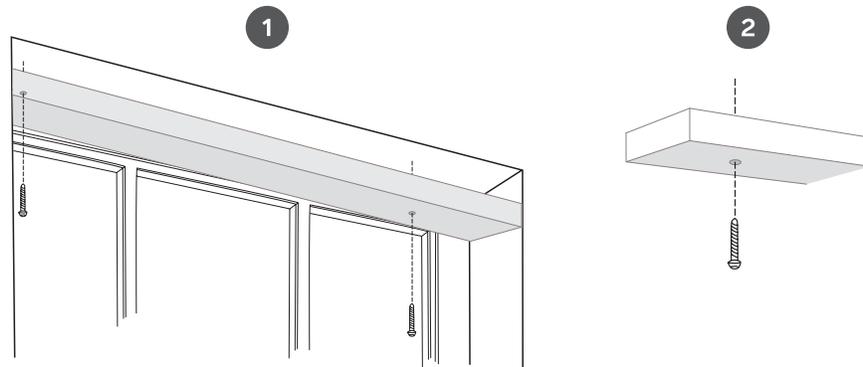

Installing Faux Romans: Outside Mount

Measure in approximately 4" from each side of the Faux Roman and mark these places on the back of the headrail, ensuring that the marks are even with each other.

Align the left slotted bracket on the outside of the mark on the left, then install a screw into the center of the bracket. Align the right slotted bracket on the outside of the mark on the right, then install a screw into the center of the bracket.

Measure in 3 1/4" from each side of the Faux Roman and mark this distance on the wall, centered at least 2" above the top of the window trim. Use your level to be sure the marks are even with each other. Install the 1 1/2" screws at these points using the screws provided.

If you have a wide Faux Roman, you will need to install extra brackets to support it. These are included. Space the additional brackets equally along the width of the window opening, level with the end brackets.

